


## Assembly instructions: DRT/PCA-SRAM-Interface 2.0



## Scope of delivery:

- 1x Interface shaft adapter (1)
- 1x Interface clamp (2)
- 1x M4x30 hexagon socket screw (3)  
(only for use with Band Clamp)
- 1x M5x18 Torx25 screw  
incl. washer (4)

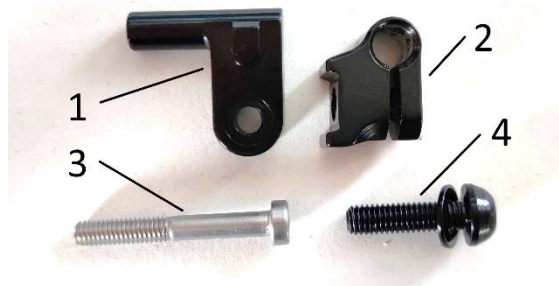

## Required tools:

- 3 mm Allen key
- Torx25-key
- Torque wrench (1-3 Nm)
- Loctite medium strength (blue)

## I. Assembly with CNC clamp:

### Existing components:

- Trickstuff brake pump (5)
- SRAM Matchmaker compatible shifter or dropper post lever (6)
- CNC clamp upper (7)
- CNC clamp lower (8)
- Clamp screw short (9)
- Clamp screw long (10)



1. Untighten and remove the clamp screws (9 und 10).
2. Place the brake pump against the handlebar and insert the CNC clamp upper half (7) into the intended bore in the pump. Then insert the CNC clamp lower half (8) from the bottom.
3. Apply a small drop of Loctite medium strength (blue) on the end of the CNC clamp upper (7) threads. Fasten the interface shaft adapter (1) with the long clamp screw (10) on the bottom side in the shown orientation for DRT/MXA or as desired. Use a torque wrench and fasten to 2,0 Nm. Pay particular attention that the red marked anti-rotation support of the interface shaft adapter sits correctly in the intended cutout of the CNC clamp lower.



4. Insert the short clamp screw (9) and align the pump on the handlebar as desired. Fasten the screw to 1,5 Nm MAX.



5. Attach the interface clamp (2) to the Matchmaker lever (6) in the shown orientation. Screw the M5-Torx25 screw (4) 1-2 turns into the lever by hand. The unit should still have a little bit of free play.



6. Push the interface clamp (2) onto the Interface shaft adapter (1) and twist the lever to the desired angle setting. Tighten the M5-Torx25 screw (4) to 3 Nm with use of a torque wrench.



7. To ensure proper installation try to lightly twist the shifter up and down. If this is possible with little effort apply carbon assembly paste on the cylindrical part of the interface shaft adapter (1) and reinstall according to the steps above.


## II. Assembly with band clamp :

Existing components:

- Trickstuff brake pump (5)
- SRAM Matchmaker compatible shifter or dropper post lever (6)
- Band clamp (11)



1. Untighten and remove the band clamp screw.
2. Mount the band clamp so the threaded side is on the top.
3. Apply a small drop of Loctite medium strength (blue) on the threads of the band clamp (11).
4. Fasten the interface shaft adapter (1) with the with the provided M4x30 screw (3) from the bottom.

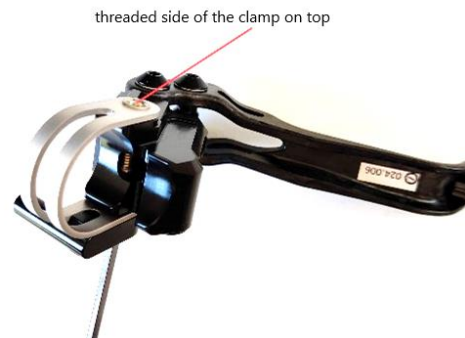

5. Proceed the assembly according to "Assembly with CNC clamp" starting at step 5.

Have fun tinkering and riding!

If you have any questions, feel free to contact your dealer or Trickstuff directly.

Trickstuff GmbH  
Schwabenmatten 17 A  
D-79292 Pfaffenweiler bei Freiburg  
Tel.: +49 (0)761 / 88 78 91-0  
info@trickstuff.de  
www.trickstuff.de